

**BEAUTURAL**

## Handheld Garment Steamer



1byone Products Inc.  
1230 E Belmont Street, Ontario, CA, USA 91761  
Customer Service: +1 909-391-3888  
[www.1byonebros.com](http://www.1byonebros.com)

Made in China

North America Instruction Manual

## Introduction

Thank you for purchasing the BEAUTURAL Handheld Garment Steamer. This instruction manual contains important information about its safety, usage, and disposal. Use the product as described and keep this manual for future reference. If you sell this steamer or pass it on, please also give this manual to the new owner.

## Safety Instructions

 
- This steamer is only authorized for domestic use and not for commercial or industrial purposes. It is only intended for applications described in these instructions.
- This steamer is not intended for use by people with limited physical, sensory, or mental abilities, or persons without required knowledge or experience. Product use by such people is allowed only under the supervision of the person or guardian responsible for their safety, with the guardian providing clear instructions on the device's operation. Ensure that children do not play with the steamer.
- This steamer may be used by children over 8 years old and by dependents if they are properly supervised and have been made fully aware of the risks of use. Children should not play with the steamer. Cleaning and user maintenance should not be performed by children without supervision.
- If the supplied power cord is damaged, it should be replaced by a qualified technician to avoid hazards.
- Care should be taken when using the product due to the emission of steam.
- Always unplug the steamer before filling, cleaning, and de-scaling.
- Carefully read all instructions before operating the steamer for the first time and save it for future reference.
- Any maintenance other than cleaning should be performed by qualified personnel.

- Remove and safely discard any packaging material and promotional labels before using the steamer for the first time.
- Do not place the steamer near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Always ensure the steamer is properly assembled before use. Follow the instructions provided in this book.
- Do not leave the steamer unattended when connected or in use.
- Do not store the steamer with water in the water tank. Always empty the tank after use.
- Do not touch hot surfaces. This steamer allows the user to steam fabrics with a large flow of steam. High temperatures are generated during use, which can cause burns. Always position your hands at the handle of the steamer when holding it and warn others (especially children) of the possible dangers of burns from steam, hot water, or hot parts, especially when steaming fabrics vertically.
- Allow the steamer to cool completely before storing.
- Store the steamer out of the reach of children.
- The steamer is not to be used if the steamer has been dropped, if there are visible signs of damage, or if it is leaking.
- The steamer is designed for household use and to be used with clean water. Do not put perfume, vinegar, or other chemicals in the tank. This steamer is not designed to work with these chemicals.
- Do not touch the steam head during use. When using the steamer, make sure the steamer head is facing away from the user and is in an upright position.
- Always test the steamer on a small discreet part of the fabric to be steamed to ensure the temperatures are not too high for the fabric.
- The steamer incorporates a thermal safety fuse to protect the steamer from over-heating. However, the steamer should not be left unattended while it is connected to the power outlet. Special care should always be

taken when there are children in the vicinity of or in a home with the steamer.

- There may be leakage from the steam head if the steamer temperature is not high enough to vaporize water and create steam. Therefore, ensure that the steamer is always preheated prior to use.
- Never use the steamer while clothes are on the body or direct the steam towards people or animals.
- To protect against electric shock, do not immerse the power cord, power plug or steamer in water or any other liquid or allow moisture to come in contact with the steamer's parts, unless it is recommended in the cleaning instructions.
- It is recommended to regularly inspect the steamer. To avoid a hazard, do not use the steamer if the power cord, power plug or steamer becomes damaged in any way. Return the entire product to the nearest repair service centre for examination and repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See an electrician for professional advice.
- Do not place this steamer on or near a heat source, such as hot plate, oven or heaters.
- Position the steamer at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

## Product Description

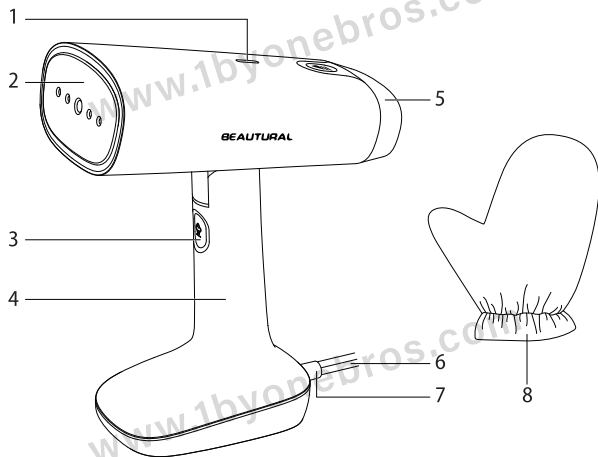

- |                          |                          |
|--------------------------|--------------------------|
| 1. Indicator Light       | 5. Water Tank            |
| 2. Ceramic Heating Plate | 6. Power Cord            |
| 3. Steam Button          | 7. Cord Guard            |
| 4. Handle                | 8. Heat Resistant Mitten |

## Included Items

- 1 x Garment Steamer
- 1 x Heat Resistant Mitten

1 x Instruction Manual

Before using the Garment Steamer for the first time, check the package contents to ensure all parts are free of visible damage.

## Getting Started

- Carefully remove the steamer from the package, making sure all of the parts are free of visible damage. Remove all protective packaging material from the steamer prior to its first use.
- Wipe the outside of the steamer with a damp cloth or sponge to remove any dust, then dry thoroughly.
- When using the steamer for the first time, you may notice a small amount of smoke and a slight odor. This is normal when heating the appliance for the first time and there is no reason for concern.

 
## Important Notes

- Any **water droplets** visible inside the tank upon unpacking are from individual quality control tests done to ensure every steamer meets our high standards for product performance.
- Always review the garment manufacturer's care label instructions before steaming, and always test fabrics for colorfastness in inconspicuous areas (such as an inseam). Steamers are not recommended for use on leather, suede, vinyl, plastic or other steam-sensitive fabrics.
- The steamer is designed for household use and to be used with clean water. Do not put perfume, vinegar, or other chemicals in the tank. This steamer is not designed to work with these chemicals.
- Do not touch the steam head during use. When using the steamer, make sure the steamer head is facing away from the user and is in an upright position.


## Filling the Water Tank

Please unplug the steamer before filling water or cleaning the steamer.


1. Hold the handle to stabilize the steamer and remove the water tank with the other hand.

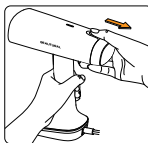

 2. Gently pull out the rubber plug at the top of the water tank. Be careful not to damage or lose the plug.

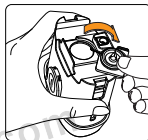

 
3. Fill the water tank with clean water through the opening and then close the rubber plug tightly.

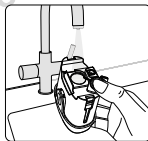

### What Water to Use:

Using distilled, purified, or filtered water is highly recommended and will reduce mineral buildup. Do not put oils, perfumes, scented additives, or other chemicals in the tank.

 4. Dry off any excess water from the tank. Attach the water tank back to the steamer securely. (The side marked with an arrow symbol faces up)

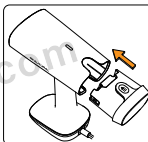

### Note:

The water pump may become louder when the water level in the tank is low. Check and refill the tank as needed.

## Using the Steamer

 
1. Read the manufacturer's fabric label to make sure the fabrics are suitable for steaming.
2. Hang the garment in an area that will not be impacted by heat and steam, such as on a shower rod.
  - This steamer is anti-dripping, meaning it can be used horizontally to steam garments on an ironing board.

3. Plug the steamer into a power outlet; the indicator light will flash white, indicating the steamer is heating.



4. After about 35 seconds the indicator light will become stable, indicating the steamer is preheated and ready for use. You can start dry ironing on the garments straight away.

5. For wet ironing, press the steam button once to generate continuous steam, and press it again to stop the steam. It is normal to feel or hear the water pump in the handle.

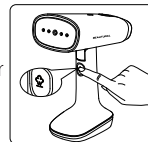

### Note:

Please press the steam button after the indicator light becomes stable, otherwise, it may cause water to leak from the steamer.

6. Use your free hand to keep the fabric taut and stretched. Remember to wear the provided heat resistant mitten on this hand to prevent burns while steaming. Steam the garment with slow, downward strokes, keeping the heating plate in contact with the fabric.



**⚠ Caution:**

- During use the steamer will become hot. Avoid touching the steam head when it is still hot.
- Never steam a garment while it is being worn or direct the steamer towards people or animals.

7. When finished steaming, press the steam button to stop steaming and unplug from the outlet.

8. Allow the steamer to completely cool off before storing. To avoid mineral buildup, empty the tank after each use.

## Steaming Tips

### Steaming Garments

1. Place the fabric in a dry and ventilated place and at least 20 cm (8 inches) away from any walls (otherwise moisture may cause mildew).
2. Empty garment pockets and straighten turn-ups such as cuffs and hems.
3. Hang the garment from a hanger and stretch the fabric slightly with one hand, making sure there is nothing behind the fabric that could be damaged by the steam.
4. Put the heating plate against the garment, press the steam button once and move your arm in an up and down motion, targeting creases on the fabric.

**Note:**

Do not steam over metal accessories. Use with caution when steaming around metal accessories.

## Steaming Curtains

1. Wash and dry the curtains.
2. Steam when they are hanging.
3. While steaming, stretch the curtains with one hand to help remove creases more easily.

## Steaming Upholstery

1. The garment steamer can be used to kill bacteria, remove odors, and freshen up furniture upholstery, slip covers and cushions.
2. Move the garment steamer over the fabric. Cushions should be removed for steaming. Allow cushions to dry thoroughly before placing back on the furniture.

## Maintenance and Care

### Cleaning the Steamer Exterior

1. Make sure the steamer is unplugged and completely cool.
2. Wipe the heating plate and outer surface with a soft, damp cloth. Water and a small amount of gentle household soap, such as dishwashing liquid, can be used on the exterior. Never use heavy-duty cleaner or abrasive scouring pads that may scratch or discolor the steamer.
3. After the steamer has been thoroughly dried, turn it back on and lightly steam over an old cloth. This will help remove any residue left in the steam holes.
4. When finished cleaning, unplug the steamer, empty the water tank and allow it to cool before storing.

## Cleaning Water Tank with Vinegar and Water

**It is recommended to clean the water tank every two months to reduce mineral buildup that can affect the performance of the steamer.**

1. Remove the water tank, open the rubber water tank cover and fill the water tank with drops of vinegar and water.
2. Shake the water tank for several minutes until the mineral build up has been removed.
3. Rinse the water tank with tap water until the vinegar is eliminated.

### **⚠ Warning:**

Do not heat the steamer with vinegar in the water tank, as this will damage the steamer.

## Storing the Steamer

Once the steamer has been disconnected from the power outlet, allow it to cool, empty the water from the water tank and clean the tank, fold the steamer and store it on a flat surface.

## Troubleshooting

| Issue                                | Possible Solution  |
|--------------------------------------|--|
| The steamer does not heat up.        | Check that the power plug is inserted correctly.<br>Check the power supply.  |
| The steamer does not generate steam. | Check the water level and check that the water tank inlet cover is properly closed.<br>The steamer has not heated up sufficiently. Let the steamer heat up for about 35 seconds before using it. |
| Water spills from the water tank.    | Make sure the water tank inlet cover is properly closed.   |

|   |  |
|---|--|
| The steamer is producing a loud humming or pumping sound. | Check the water level. If there is no water or the water level is low, refill the water tank.                        |
| The steamer does not seem to remove creases easily.       | For more difficult wrinkles, try steaming from the underside of the fabric.  |
| Avoiding discoloring garments on metal accessories.       | Do not directly hover the steamer over the metal accessories.<br>Use caution and steam around the metal accessories. |

## Specifications

Product Name: BEAUTURAL Handheld Garment Steamer

Model: 722NA-0013

Rated Voltage: AC 100-120V/220-240V~ 50/60Hz

Rated Power: 830-1200W/1200-1400W

Heating Plate Temperature: 284°F(140°C)

Water Tank Capacity: 4.7 fl.oz (140ml)



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.

## Customer Service

|                                       |   |
|---------------------------------------|---|
| <b>UNITED STATES</b>                  | Phone: +1 909-391-3888<br>(Mon-Fri 9:00am - 5:00pm PST)<br>Email: ushelp@1byonebros.com |
| <b>CANADA</b>                         | Email: cahelp@1byonebros.com  |
| <b>UNITED KINGDOM</b>                 | Email: ukhelp@1byonebros.com  |
| <b>GERMANY/FRANCE<br/>ITALY/SPAIN</b> | Email: euhelp@1byonebros.com  |

### BRAND OWNER

1byone Products Inc.

1230 E Belmont Street, Ontario, CA, USA 91761

Customer Service: +1 909-391-3888

www.1byonebros.com