

BEAUTURAL

Handheld Garment Steamer

24-Hour Customer Service & 2-Year Warranty

Phone: +1 (909) 391-3888
(Mon-Fri 9:00am - 5:00pm PST)
US: ushelp@1byonebros.com
Website: www.1byonebros.com



Instruction Manual

If any accessory is missing from the package or there are any issues with the product, please get in touch with our official customer service. We will be pleased to serve you!

1byone Products Inc.
1230 E Belmont Street, Ontario, CA, USA 91761
Customer Service: +1 909-391-3888
www.1byonebros.com

Made in China

Introduction

Thank you for purchasing the BEAUTURAL Handheld Garment Steamer. This instruction manual contains important information about the safety, usage, and disposal of your hair dryer. Only use the product as described, and keep this manual for future reference. If you sell this hair dryer or pass it on, give this manual to the new owner.

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE

Safety Instructions

1. This appliance is not intended for use by people with limited physical, sensory, or mental abilities or people without the required knowledge or experience. Product use by such people is only allowed under the supervision of the person or guardian responsible for their safety, with the guardian providing clear instructions on the device's operation. Ensure that children **DO NOT** play with the steamer.
2. Care should be taken when using the appliance due to the emission of hot steam.
3. **ALWAYS** unplug the appliance during filling and cleaning.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid a hazard.
5. This appliance can be used by children aged from eight years and above and those with reduced physical, sensory or mental capabilities or who lack experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children must not play with the appliance. Children must not undertake cleaning and user maintenance without supervision.
6. The temperature of water should not be more than 35 °C

WARNING - The appliance is electrically live even when the switch is off

To reduce the risk of death by electric shock:


1. **ALWAYS** unplug the appliance immediately after use.
2. **DO NOT** place or store the appliance where it can fall or be pulled into a tub or sink.
3. **DO NOT** place the appliance in or drop it into water or other liquids.
4. If the appliance falls into water or another liquid, unplug it immediately. **DO NOT** reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to a person:

1. The appliance should **NEVER** be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
3. Only use this appliance for its intended use as described in this manual. **DO NOT** use attachments that are not recommended by the manufacturer.
4. **NEVER** operate this appliance if it has a damaged cord or plug.
5. If the appliance is not working properly, or if it has been dropped or damaged, or dropped into water. **DO NOT** attempt to repair the appliance because incorrect reassembly or repair could cause a risk of fire, electric shock, or injury. Return the damaged appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces. **DO NOT** allow the cord to contact heated surfaces. **DO NOT** pull or twist the cord. Ensure the appliance has fully cooled down before storage. Gently wrap the cord around the appliance in a loose coil when storing.
7. **NEVER** drop or insert any object into any opening.

8. **DO NOT** use the appliance outdoors or operate it where aerosol (spray) products are being used or where oxygen is being administered.
9. **DO NOT** use an extension cord to operate the appliance.
10. The surfaces of this appliance may be hot when in use. **DO NOT** let heated surfaces touch the eyes or skin.
11. **DO NOT** place the steam nozzle directly on any surface or on the appliance's power cord while it is hot or plugged in.
12. Unplug this appliance before filling or emptying.
13. **DO NOT** operate the steamer without properly filling the water container with distilled water.
14. **DO NOT** yank the cord to unplug it; instead, firmly hold the plug and gently tug it out.
15. Burns could be caused by touching the hot parts, hot water, or steam. Handle with care when removing the water tank or turning the steam appliance upside down, as the tank could still contain hot water.
16. **ALWAYS** position the steamer's head away from yourself and others during its operation.
17. To reduce the likelihood of a circuit overload, **DO NOT** operate another high-wattage appliance on the same circuit.
18. When installing or removing attachments, please make sure the unit is off, has cooled, and no steam is being released to avoid contact with hot water.
19. Be careful when installing or removing an attachment, as it may contain hot water from condensation. Ensure that the attachment is dry and has cooled off to avoid contact with hot water.
20. **NEVER** steam clothes that you or someone else is wearing.
21. **DO NOT** hold your hand in front of the steamer.

Product Description

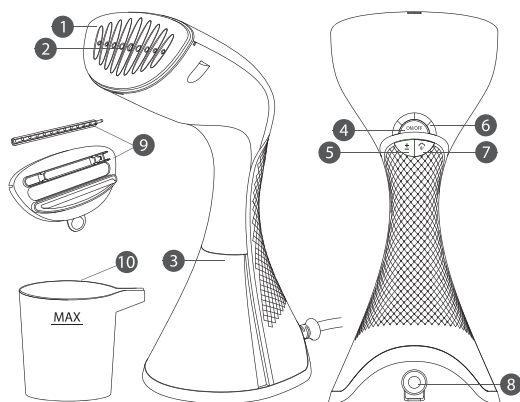

- | | |
|-------------------------------|--------------------------------------|
| 1. Ceramic Press Plate | 6. Indicator Lights |
| 2. Steam Nozzle | 7. Steam Button |
| 3. Detachable Water Reservoir | 8. Power Cord |
| 4. ON/OFF Button | 9. 2-in-1 Silicone Band/Fabric Brush |
| 5. Steam Level Control | 10. Measuring Cup |

Included Items

- | | |
|------------------------------|---------------------------------------|
| 1 x Handheld Garment Steamer | 1 x 2-in-1 Silicone Band/Fabric Brush |
| 1 x Measuring Cup | 1x Instruction Manual |

Before using the handheld garment steamer for the first time, check the package contents to ensure all parts are free of visible damage. Please retain the original packaging materials for exchange or return purposes.

Operation Instructions


Before the First Use

- Carefully remove the steamer from the package, ensuring all parts are free of visible damage. Remove all protective packaging material from the steamer before its first use.
- Wipe the outside of the steamer with a damp cloth or sponge to remove any dust, then dry thoroughly.

Filling the Water Reservoir

- Please ensure the appliance remains turned off and unplugged before filling the water reservoir.

1. Grasp the handle with one hand, and then pull the water reservoir out from the handle body.

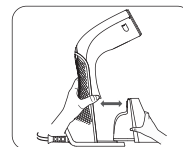

2. Reveal the rubber inlet cover on the top of the reservoir.



3. Then, fill the water reservoir with clean water (do not exceed the MAX line).




What Water to Use?

The use of distilled, purified or filtered water is highly recommended and will reduce mineral buildup.

DO NOT use oils, perfumes or scented additives.

4. Close the inlet cover and return the reservoir to its proper position, making sure that it snaps in place and is secure.

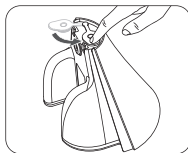


5. **ALWAYS** drain any remaining water in the reservoir before storing the appliance.


Note: The water pump may become louder when the water level in the tank is low. Check and refill the tank as needed.


Using the Steamer

1. Fill the water reservoir with distilled water according to the directions.


2. Plug the unit into the electrical outlet.

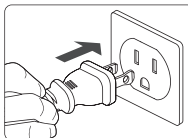

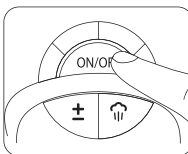

3. Press  to turn the unit on. All four indicator lights will illuminate green and begin blinking. Allow 35 seconds for the unit to warm up. The appliance is ready to use when all lights stop blinking and remain solid.



Note: This steamer is only for 120-volt outlet use. Plugging into 220-240 volts will damage it.

4. This steamer has two options for steam: To choose the steam setting, press . Two lights indicate NORMAL mode for delicate fabrics with light wrinkle or everyday cottons and polyester fabrics with moderate wrinkles. Four lights indicate TURBO mode for thicker fabrics and heavily wrinkle fabrics.

Note: Please press  after the indicator lights become stable; otherwise, no steam will be emitted.

5. When you have finished steaming, press  again to stop steaming, and then allow it to cool off completely for at least 30 minutes before storing the device.
6. Unplug the device when it is not in use.

Caution:


- During use, the steamer will become hot. Avoid touching the steaming plate when it is still hot.
- **NEVER** steam a garment while it is being worn or direct the steamer towards people or animals.

2-IN-1 Attachment


Silicone Band - pulls fabric taut for better results.

Bristle Brush - ensures the steam penetrates fibers for a perfect press, even on heavy fabrics.


With the garment steamer off and cool, snap the 2-in-1 Silicone Band/Bristle Brush Attachment over the steam head, ensuring it is firmly affixed. For the 2-in-1 attachment, the Silicone Band can be used by itself.

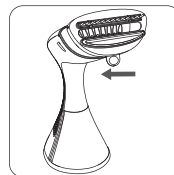

Note: For delicate fabrics such as nylon, and polyester, ensure that the bristle brush is removed to prevent possible damage.

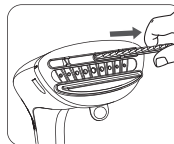

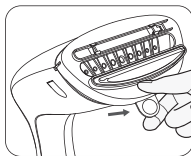


To remove the attachment, allow the steamer to cool before removing the brush. Put your finger under the pointed tip and lift it up.



Caution: Change the attachment carefully after the unit has been used, as the steam head will continue to be hot.

Auto Shut-Off Feature

WARNING: **ALWAYS** disconnect your steamer from the mains supply socket after use. **NEVER** leave the appliance unattended while the auto shut-off function is in operation.

When powered on, the machine will enter standby mode if inactive for 20 minutes, with all indicator lights illuminating and breathe on and off. To reactivate heating, press  to resume the steaming process; press , or  will not restart the process.


Steaming Tips



1. First, read the garment's label to determine whether the item is steam/iron-tolerated. If not, **DO NOT** use the appliance on the garment.
2. Then, test the unit on an inconspicuous area of the item to be steamed using the NORMAL mode to double check the fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
3. Hang your garment or fabric.

Caution:

- Avoid using metal clothes hangers if possible.
- When hanging a garment on a door while steaming, be careful not to damage the door with steam.

4. Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
5. For heavier fabrics or severely wrinkled fabrics, you may position the steamer head directly on the fabric for a few seconds to remove wrinkles. Be cautious when working with delicate fabrics.

Note: If you find the garment damp after steaming, stop the steam by pressing . Then use the Ceramic Press Plate to dry your garment.

6. After use, turn the steam off by pressing . Then, press  to turn the unit off. With dry hands, unplug the device steamer from the outlet. Empty any remaining water from the reservoir to avoid leakage.

Note: Be sure to press  prior to unplugging the unit.

7. When steaming, **ALWAYS** keep the unit in motion and about one inch from the surface of the item being steamed to avoid potential damage.
8. **DO NOT** linger the steam jet over an area or make direct contact to the fabric, as it may cause damage including shrinkage, melting or color shift.

Cleaning and Maintenance

Self-Cleaning Function




After five hours of accumulative use, the steam mode indicator lights will flash to indicate that the appliance needs descaling. Regular descaling helps to remove scaling and impurities and prolongs the life span of your appliance. If the water in your area is very hard, the descaling should be performed more frequently.

Before initiating the descaling procedure, it's imperative to adhere to the following steps meticulously:

1. Make sure the appliance remains unplugged.

- Fill the water reservoir with distilled water (to the MAX line) as instructed above.
- It's recommended to put a water container under the steam nozzles or commence the process near the sink.

Commencing the descaling process involves the following actions:

- Position the appliance on a surface that is flat, stable and heat-resistant, and ensure the steamer is **NOT** positioned toward you or others.
- Plug in to the socket, and then press  to activate the machine, and wait for the preheating process to finish.
- Press and hold  and  at the same time for five seconds to activate the cleaning mode. In the meantime, the indicator light will flicker rapidly to signify the process is ongoing.
- During the self-cleaning process, hold the appliance over the water container (or sink) with Press Plate facing down.

WARNING: During the cleaning process, hot water and steam will be emitted from the steam nozzles. Please use caution to avoid the hazard of a burn.

- After around one minute of cleaning the water circuit, the appliance will automatically start a 20-second drying mode.

Once all the procedures are completed, all the indicator lights will shut off, and the steamer will return to the previous setting.

Clean the Steamer Exterior

- Make sure the steamer is unplugged and completely cool.
Water and a small amount of gentle household soap, such as dishwashing liquid, can be used on the exterior. Never use any heavy-duty cleaner or abrasive scouring pads, as they could scratch or discolor the steamer.
- When finishing cleaning, wait until the appliance has dried off before storing it.

Troubleshooting

Issue	Possible Causes	Solution
There is no steam.	The steamer is not plugged in, or not switched on.	Check that your steamer is correctly plugged in and switched on.
	The water level is too low.	Unplug the steamer and refill it.
	The water tank is not clicked fully in place.	Ensure that the water tank is installed properly (i.e., clicked in place).
	The steamer is in auto-shut-off mode.	Press the ON/OFF Button to resume the steaming process.
	Used at the incorrect voltage of 220-240V. Only 120 volts are suitable for this steamer.	The steamer is malfunctioning. Please get in touch with customer service.
Not enough steam comes out.	There is not enough water in the water tank.	Unplug the steamer and refill it.
	The steamer is not heated to full temperature.	Always allow the steamer to preheat until the indicator light becomes solid.
	The water circuit may be clogged.	Activate the self-clean process as instructed above.
The steamer does not heat.	It is not plugged in, or not switched on.	Plug in your steamer and switch it on.
	The steamer is in auto-shut-off mode.	Press the ON/OFF Button to resume the steaming process.
	Used at the incorrect voltage of 220-240V. Only 120 volts are suitable for this steamer.	The steamer is malfunctioning. Please get in touch with customer service.
Water leaks.	The water tank is not fully clicked in place, or the cover is not closed properly.	Ensure that the cover is closed and the water tank is installed properly (i.e., clicked in place).

Specifications

Model: 722NA-0016

Rated voltage: AC 120V 60Hz

Rated power: 1800W

Water reservoir capacity: 8oz

Preheating time: 35s



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.

Customer Service

UNITED STATES	Phone: +1 909-391-3888 (Mon-Fri 9:00am - 5:00pm PST) Email: ushelp@1byonebros.com
CANADA	Email: cahelp@1byonebros.com
UNITED KINGDOM	Email: ukhelp@1byonebros.com
GERMANY/FRANCE ITALY/SPAIN	Email: euhelp@1byonebros.com

BRAND OWNER

1byone Products Inc.

1230 E Belmont Street, Ontario, CA, USA 91761

Customer Service: +1 909-391-3888

www.1byonebros.com